



BAILEY BOXES

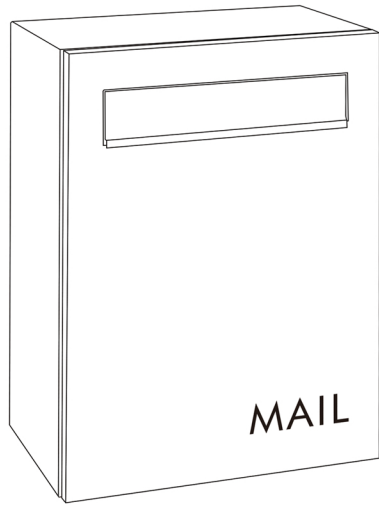

**THANK YOU
FOR BUYING THE
FRANKLIN FROM
BAILEY BOXES.**


**IF YOU LOVE IT,
LET US KNOW.
EVEN BETTER,
TELL YOUR
FRIENDS AND
NEIGHBORS.**

**IF YOU HATE IT...
WELL, HATE IS A
STRONG WORD.
MAYBE YOU
NEED A HUG.**

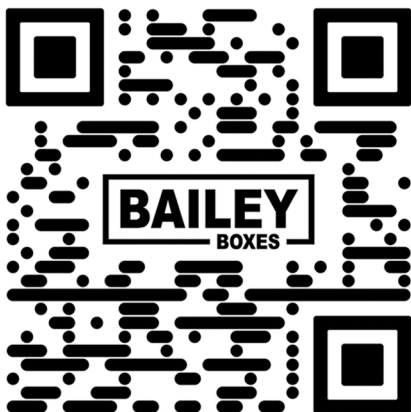

THE FRANKLIN INSTALLATION INSTRUCTIONS

■ HARDWARE

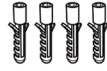

PLASTIC ANCHORS X4



SCREWS X4



KEYS X4

■ INSTALLATION

- 1) Search all bags and foam to find the keys, and unlock the front door.
- 2) Place The Franklin on the wall where you'll be mounting. Level the mailbox and mark the wall through the holes accordingly... and then check again.
- 3) Drill 1/4" holes in the mounting wall. Bricks and concrete walls will need a hammer drill and hammer drill bit.
- 4) Insert the plastic anchors into the 4 holes.
- 5) Place the mailbox against the wall and screw the screws into the anchors.
- 6) You did it. Well done. If it's crooked, stick a few shimmies under your house's foundation.
- 7) Sit back and admire with a cold drink.

